Selection Guide

Bypass Intelligent Motor Soft Starter

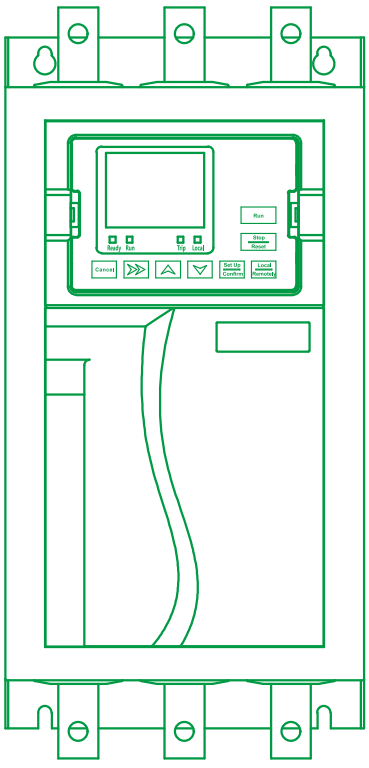

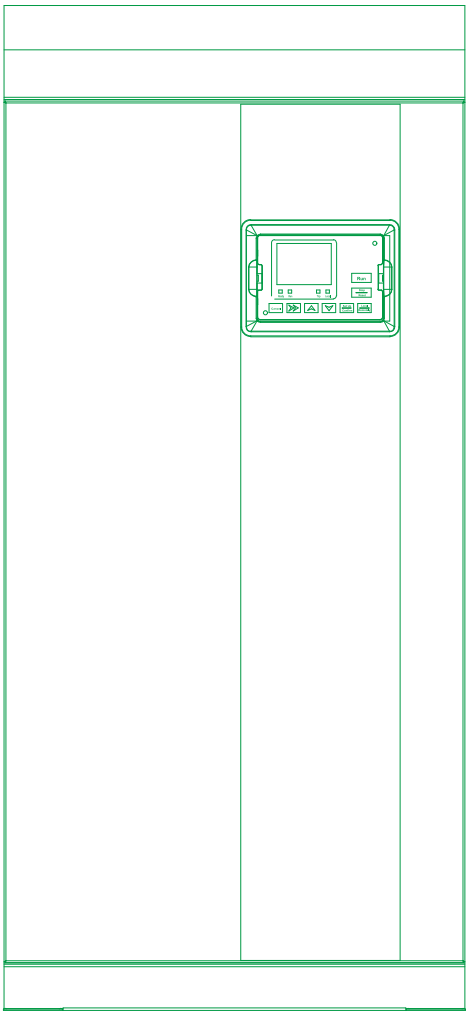

6600 Series
Bypass intelligent motor soft starter

6600 Series
Bypass intelligent motor soft starter

More control

- 6600 soft starter/cabinet adopts a new generation of soft start technology, and adaptive control realizes the control of the motor acceleration curve and deceleration curve to an unprecedented level.
- The soft starter reads the data of the motor in the process of starting and stopping, and then adjusts to achieve the best effect. Just select the curve most suitable for your load type, and the soft starter will automatically ensure that the load is accelerated in the most stable way possible.

Easy to use

- Whether in the process of installation, debugging and use, or troubleshooting, 6600 is very easy to use.
- Quick setting can make the machine run quickly, the information screen can display various operating data, and the trip message can be displayed in language to explain exactly where the problem is.
- The control cable can be routed from the top, bottom or left. Very flexible and unique cable access and fixing devices make the installation faster and more tidy and beautiful. You will experience the use soon.

Features

- 6600 is a highly intelligent, very reliable and easy-to-use soft starter/cabinet. The newly designed functions of 6600 are used for quick setting or more personalized control. It is a perfect solution. Its performance includes:
- Large LCD screen that can display feedback information in Chinese and English languages, other languages can be customized
- Remotely installable operation panel
- Intuitive programming
- Advanced start and stop control functions
- A series of motor protection functions
- Extensive performance monitoring and event logging

Selection model definition

6600 - 011A - Z(S)

- Z=device type
  S=Comprehensive cabinet
- Rated current 011A means 11A
- 6800:6600 Series

Multiple starting control methods

- A variety of starting methods can meet your various load requirements, and users can choose the starting method according to their own load conditions.
- 6600 simplifies the installation and operation of the motor starting system, thereby reducing installation costs and shortening installation time.

11A-75A　90A-150A　180A-230A

(The current range of 11A-640A is conventional 380V, and 220V needs to be ordered separately)

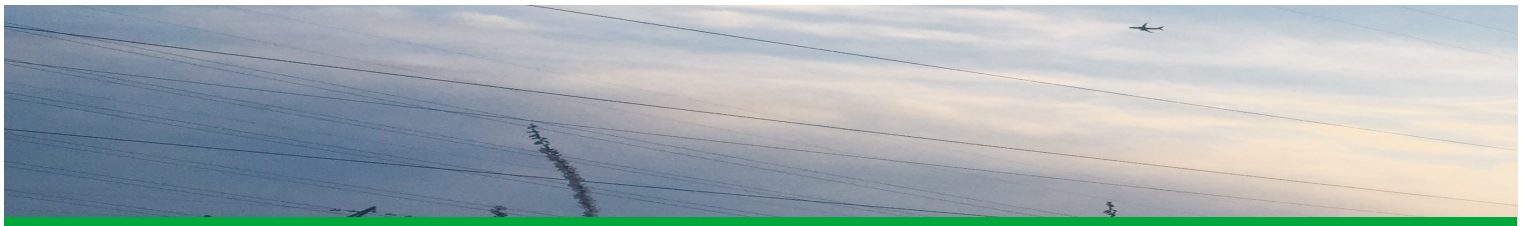

6600 Series
Bypass intelligent motor soft starter

Real-time display of real language

Company hopes to make your work easy and worry-free, so 6600 displays feedback information in real language, you don't have to check the code to understand what happened. With 10 sets of fault records, tracking the performance of the motor has never been easier.

Remote display installation

With the optional operating panel installation kit, the operating panel can be easily installed outside the cabinet. If multiple soft starters are installed in a cabinet, it is convenient for centralized control in one place and all relevant information can be obtained. You can also install multiple monitors side by side,

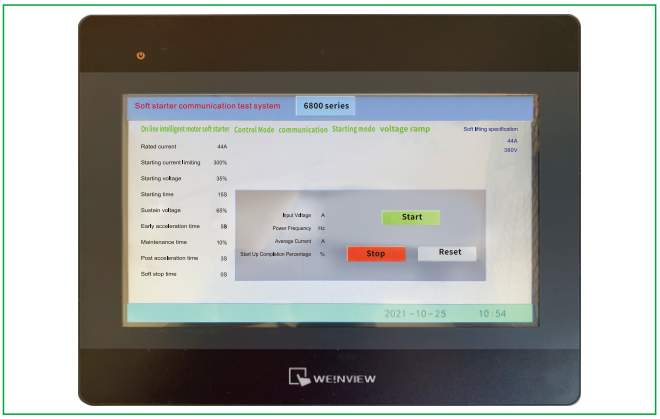

Detachable connector and unique wire connector

It adopts pluggable control wiring block, which is easy to install. Just unplug each terminal block and re-insert the terminal block after connecting the wires.
The unique flexible cable routing method of 6600 can be used to effectively arrange the cables. The cables can be routed from the top, left or bottom.

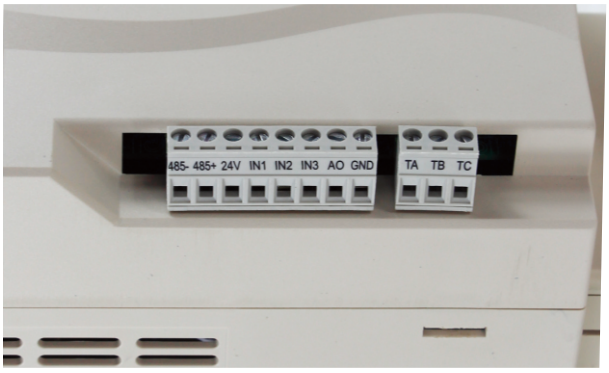

485 Communication

Comes with regular Modbus 485 communication function, and can also customize mobile phone APP, etc., which is convenient for users to remotely debug and control.

Dimensions and specifications

Voltage Level	Rated Working Current	Rated Power	Display method	Number of parameters	Protection function type	input Output Number of terminals	Overload capacity
220V	11A- 640A	5.5kW- 185kW	Chinese English) LCD	55 PCS	10 kinds	13 PCS	Adjustable
380V	11A- 640A	5.5kW- 320kW					

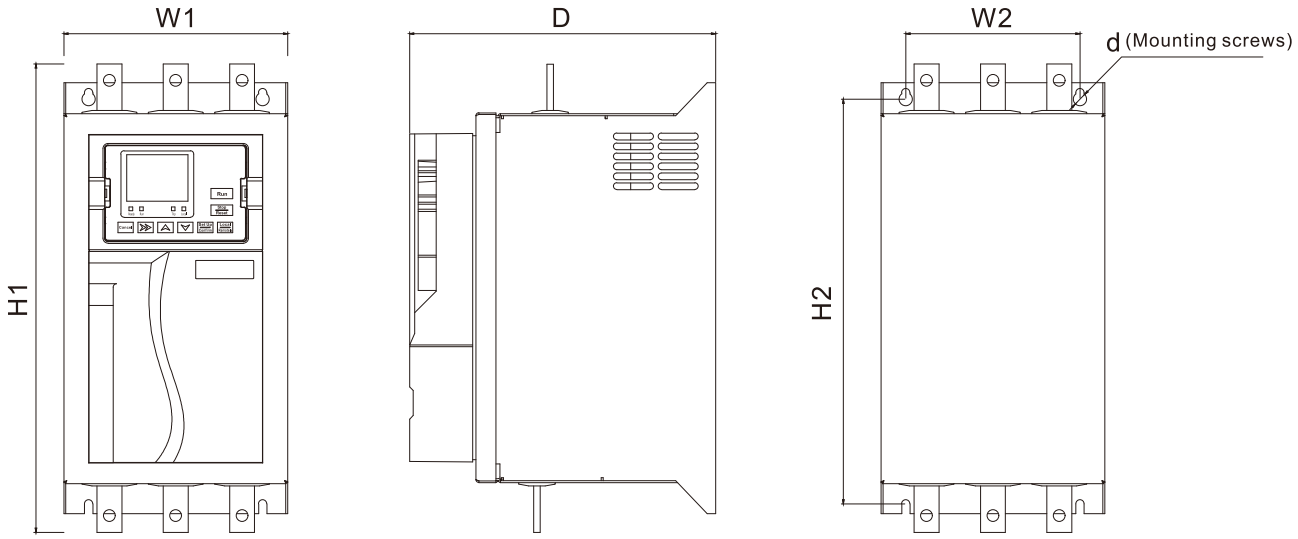

figure 1

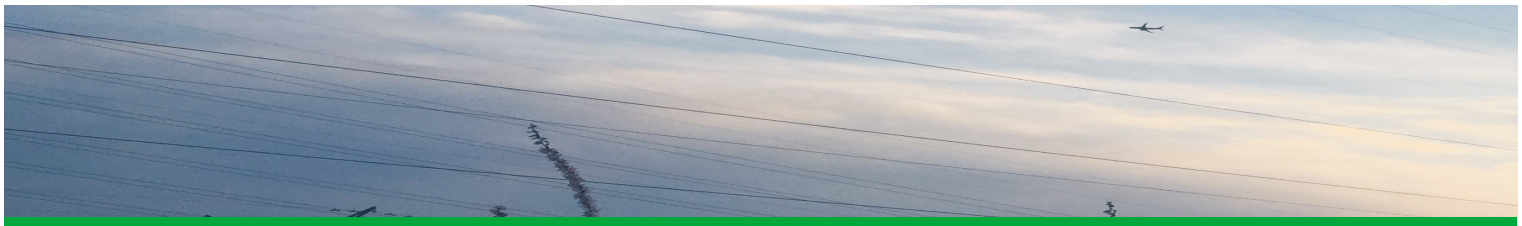

6600 Series
Bypass intelligent motor soft starter

Dimensions and specifications

Voltage Level	Rated Working Current	Rated Power	Display method	Number of parameters	Protection function type	input Output Number of terminals	Overload capacity
220V	11A- 640A	5.5kW- 185kW	Chinese English) LCD	55 PCS	10 kinds	13 PCS	Adjustable
380V	11A- 640A	5.5kW- 320kW					

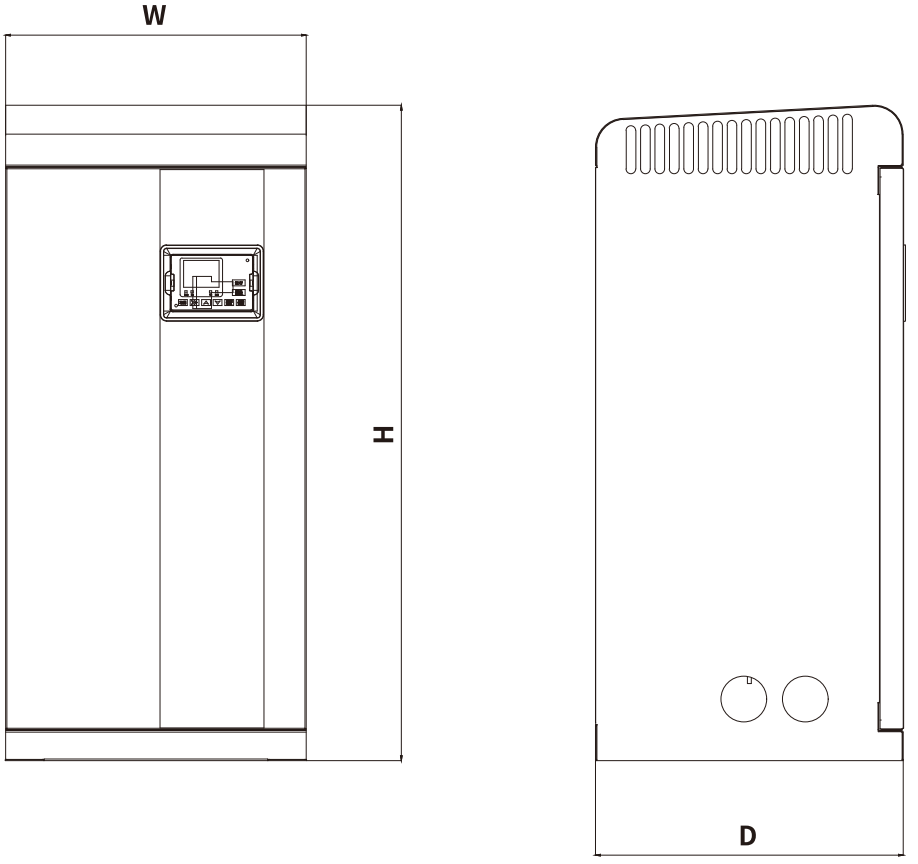

figure 2

Basic wiring diagram of soft starter

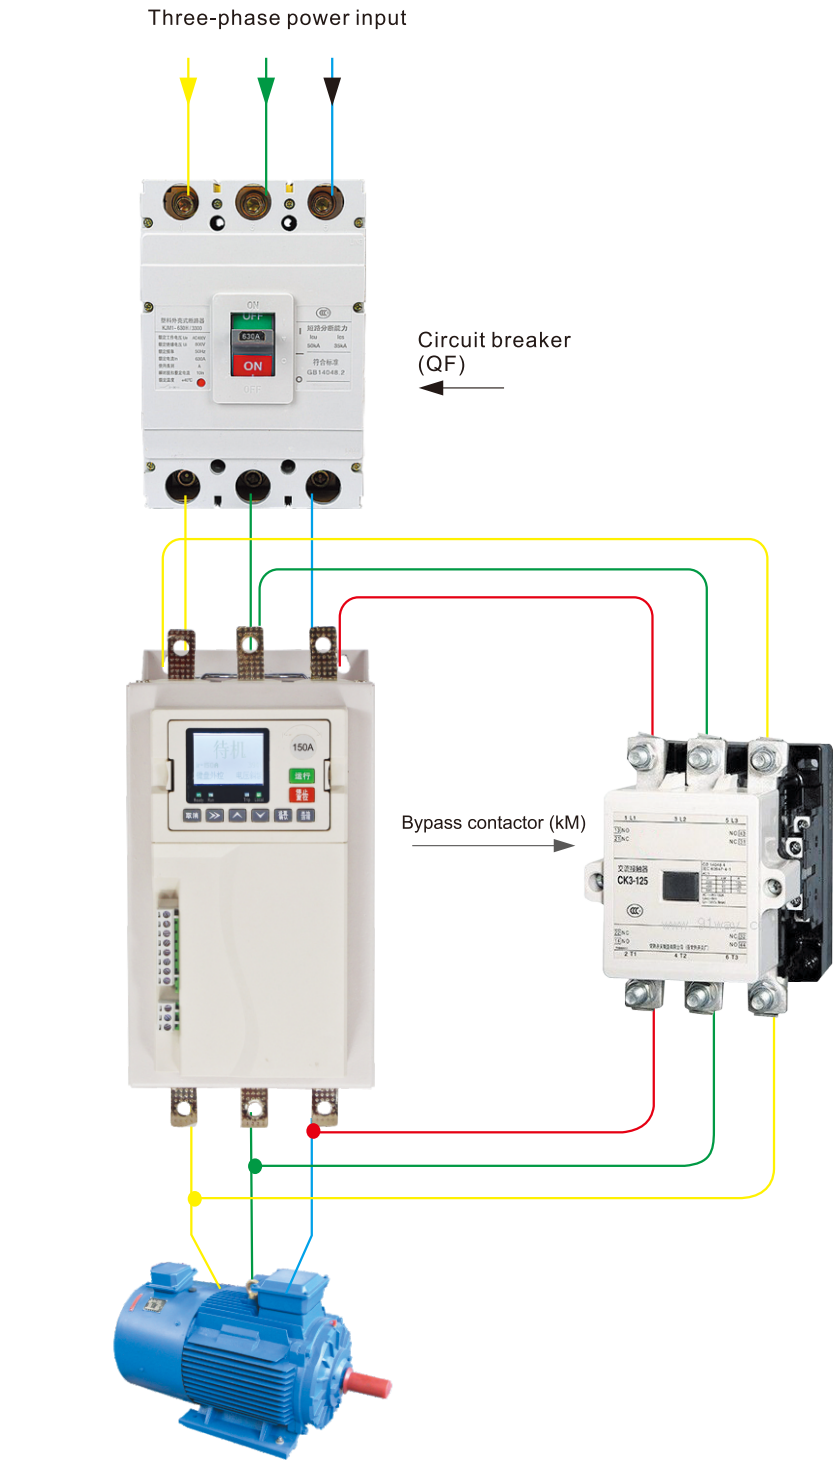

6600 Series
Bypass intelligent motor soft starter

Soft starter function introduction

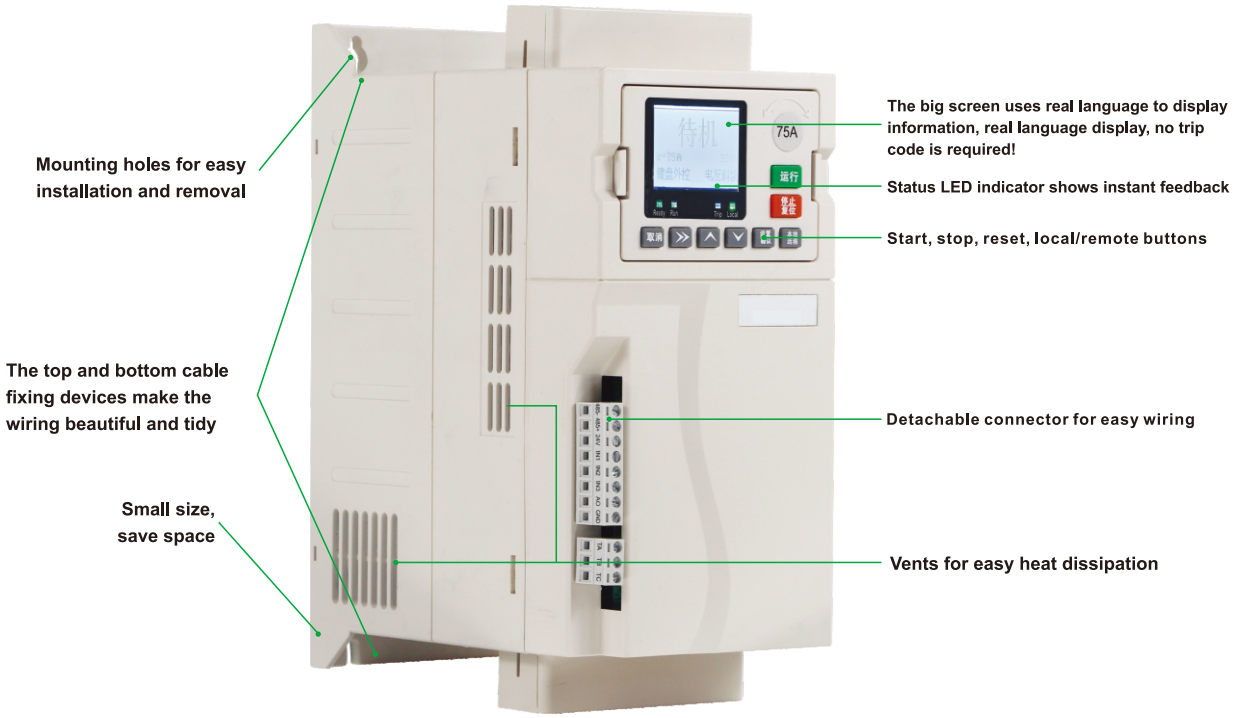

Optional soft start curve

- Voltage ramp start
- Current limit start
- Torque start

Expanded input and output options

- Remote control input
- Relay output
- Analog output
- RS485 communication output

Customizable protection

- Input phase loss
- Output phase loss
- Soft starter overheated
- Phase sequence
- Running overload
- Starting overcurrent
- Running overcurrent
- Overpressure
- Undervoltage
- Underload

Optional soft stop curve

- Free parking
- Timed soft parking

Easy-to-read display shows comprehensive feedback

- Removable operation panel
- Built-in Chinese + English display

Models that meet all connection requirements

- 11A-800A (rated)
- 220VAC-380VAC

Easier to install

If the space of the motor control center is limited, the compact design of SCKR1-6800 can save space and eliminate unnecessary troubles. The built-in indicator, numerous controls, and built-in input and output functions can reduce the installation space and cost of external equipment, and can also simplify installation.

External connection diagram

Conventional

Current range ..... 11A- 800A (rated)

Power Supply

Power supply voltage (L1, L2, L3)

6600- XX.....220VAC (±10%)

6600- XX.....380VAC(±10%)

Power frequency..... 30- 70Hz

Enter

Input..... Active 24VDC, about 8mA

Start..... Normally open

Stop..... Normally closed

Fault input.....Normally open

Output

Relay output...10A @ 250VAC resistive circuit

.....5A @ 250VAC

Programmable relay (TA, TB, TC).....

normally open or normally closed

Programmable output

Analog output (AO, GND)...0-20mA or 4-20mA

Communication output (485-,485+).....RS485 communication

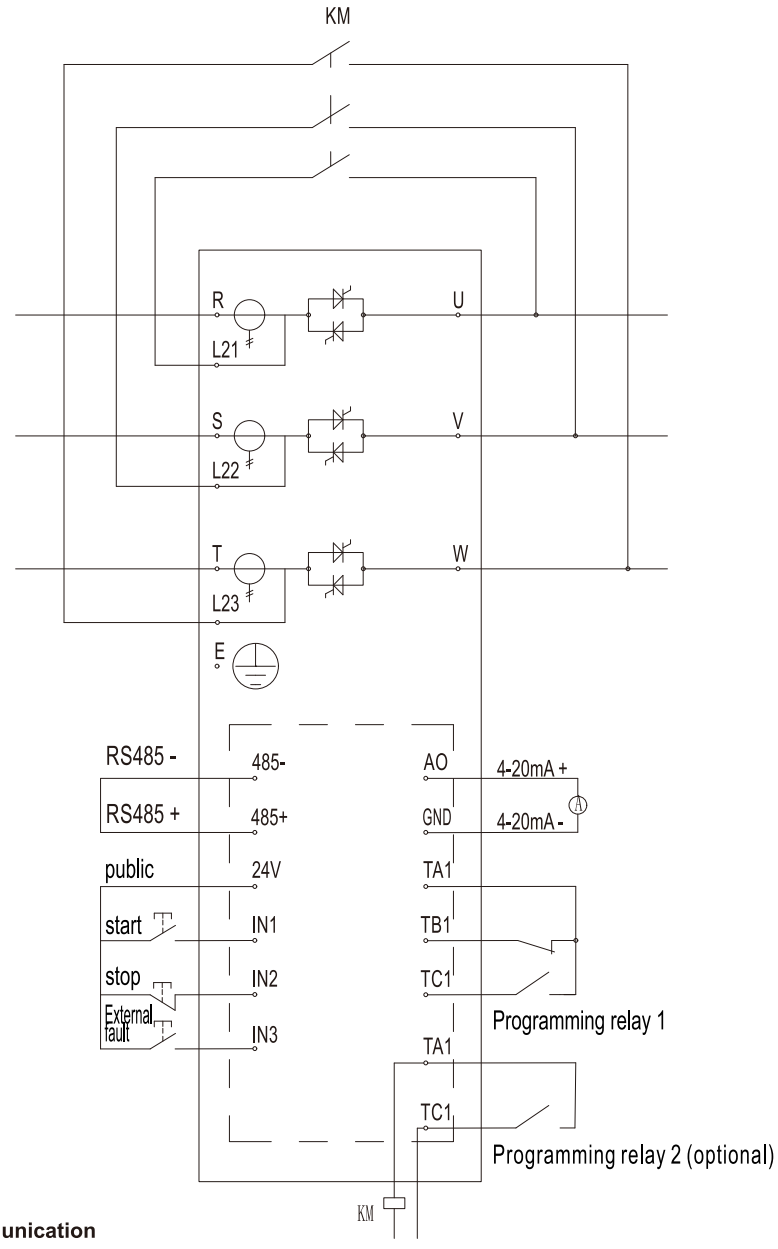

6600 Series
Bypass intelligent motor soft starter

Comparison of soft starter, star delta, auto coupling

Project	Soft starter	Star triangle	Self-coupling
Overvoltage And Undervoltage Protection	have	nothing	nothing
Short Circuit Protection	have	have	Knife switch, no protection, low safety factor
Overload Protection	Yes (current value can be set)	have	have
Input Phase Loss Protection	have	nothing	nothing
Output Phase Loss Protection	have	have	have
Under Load Protection	Yes (applicable to water pump to prevent idling from burning the water pump)	nothing	nothing
Start Mode	varied	one kind	one kind
Phase Sequence Protection	have	nothing	nothing
485 Communication	have	nothing	nothing
Convenient Maintenance	18 months warranty	Generally, the contactor is only guaranteed for three months	Generally, the contactor is only guaranteed for three months
Convenient Transportation	Small volume and light weight	Small volume and light weight	Especially bulky and troublesome transportation
Display	Chinese LCD display, simple operation and convenient troubleshooting	nothing	nothing
Cost Performance	Soft start is 10% cheaper than the auto coupling cabinet. It is installed on the wall with low power and has higher cost performance. Internal delta connection method can be adopted for soft starting. For example, 37KW soft starter can be selected for 55kW motor		

Matching function selection of water pump

Matching function selection of water pump			
①	0: None	None: standard soft start function.	As shown in Figure 1
②	1: Floating ball	Floating ball: in1, closed start, disconnected stop. In2 has no function.	As shown in Figure 2
③	2: Electric contact pressure gauge	Electric contact pressure gauge: in1 starts when it is closed, in2 stops when it is closed.	As shown in Figure 3
④	3: Water supply level relay	Water supply level relay: in1 and in2 are disconnected and started, and in1 and in2 are closed and stopped.	As shown in Figure 4
⑤	4: Drain level relay	Drainage level relay: in1 and in2 are disconnected and stopped, and in1 and in2 are closed and started.	As shown in Figure 5

Note: the water supply function starts and stops in3 control, the standard soft start in3 is an external fault, and the water supply type is used to control the start and stop. In3 is the starting end. The above operation can be performed only when it is closed, and it is disconnected and stopped.

0: None

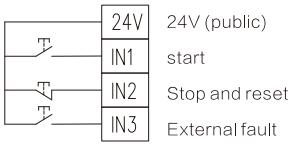

Figure 1

1: Floating ball

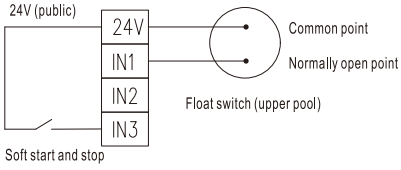

Figure 2

2: Electric contact pressure gauge

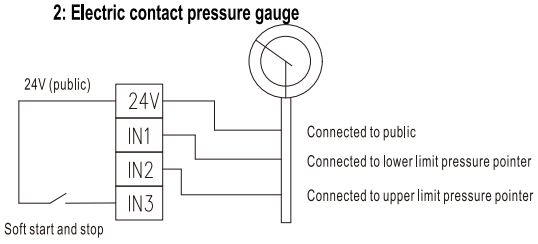

Figure 3

3: Water supply level relay

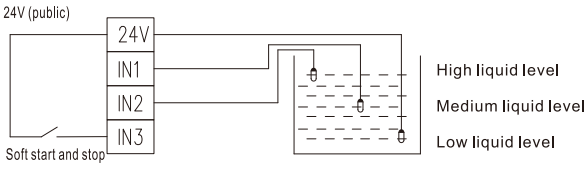

Figure 4

4: Drain level relay

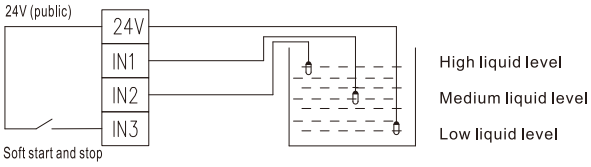

Figure 5